

## Satellite Dish Set Up/Tuning Instructions

Connect all cables and sat finder to dish **and** receiver

Switch on TV **and** Satellite Receiver

Change TV mode to **Scart**

TV should now show **NO SIGNAL IS BEING RECEIVED**

Turn dial on sat finder just until sound is heard

Point satellite dish directly south

Turn dish slowly east until sat finder reaches the highest sound  
pitch

**LOCK DISH IN THIS POSITION**

Check elevation of dish (up/down) until highest sound is  
reached

**GO BACK INTO CARAVAN**

Using sky remote press services button

Using sky remote press **4**

Using sky remote press **6**

You should now be looking at the signal test screen

If signal strength and signal quality is above 50% then you are ok

Signal lock should be **locked**

Settings should read **0002/07d4**

Using the sky remote press TV Guide

**ENJOY SYSTEM IS NOW SET UP**